

Updating a HASP

Follow these steps to update a standalone HASP to run Mastercam X. Perform these steps after installing Mastercam X. [Click here](#) to see instructions for a NetHasp.

1. Start the HaspX.exe program. Click **Start, Programs, Mastercam X, Hasp X**.
2. Check the **Serial number** field. It should show the serial number of the SIM attached to your computer. [Click here](#) if **0** is displayed.
3. Check the message in the status area at the bottom of the dialog box. It should display **HASP found**. [Click here](#) if it does not.
4. Click the **Update code** button and select the .HCode file for the SIM attached to your computer. Typically, this file will be supplied to you by your reseller. The update code will display in the dialog box.
5. Click the **Update** button at the top of the dialog box to update the SIM with the code.
6. Check the message in the status area. It should read, **HASP#nnnnnn** updated successfully, where **nnnnnn** is the serial number of your SIM.
7. Click **OK** to exit.

HaspX.exe (c) 2005 CNC Software, Inc. (v1.4)

Mastercam X

Read Update OK

Update code: 236251438324980 242227573949692-104549

User type: Industrial

Serial number: 24920

Mastercam X Mill Level 3
Mastercam X Solids

Start date: 08/02/2005

End date: 09/01/2005

Maintenance Expiration date: 09/01/2005

HASP #24920 successfully updated

Update HASP dialog box