

Updating a NetHASP

Follow these steps to update a NetHASP to run Mastercam X. Perform these steps after installing Mastercam X. [Click here](#) to see instructions for a standalone HASP.

1. Start the NHaspX.exe program. Click **Start, Programs, Mastercam X, NHasp X**.
2. Set the **SIM type** to **NetHASP**.
3. Set the **Mode** to **Local**. **Please keep in mind that any type of remote access, remote desktop, remote terminal etc. are NOT supported.**
4. Check the **Serial number** field. It should show the serial number of the SIM attached to your computer. [Click here](#) if **0** is displayed.
5. Check the message in the status area at the bottom of the dialog box. It should display **Local NetHASP-**nn** found**, where **nn** is either **20** or **50**. [Click here](#) if it does not display this message.
6. Click the **Update code file** button and select the .NHCode file for the SIM attached to your computer.
Typically, this file will be supplied to you by your reseller. The name and path of the update code file will display in the dialog box.
7. Click the **Update** button on the right side of the dialog box to update the SIM with the code.
8. Check the message in the status area. It should read, **NetHASP-**nn** updated successfully**, where **nn** is either 20 or 50.
9. Click **OK** to exit.

NhaspX.exe (c) 2005 CNC Software, Inc. (v1.7)

SIM type: HASP NetHASP

Mode: Local Network

Update code file: C:\files\N56 Aug 03 05 Sep 02 05.NHCode

2 Mastercam X Mill level 1
2 Mastercam X Mill level 3
2 Mastercam X Wire
1 Mastercam X Design
6 Mastercam X Solids

Read
Update
Active licenses
Stop
OK

User type: Industrial
Serial number: 56
Start date: 08/03/2005
End date: 09/02/2005
Maintenance expiration date: 09/02/2005
CATIA Maintenance expiration date: No Catia addons

NetHASP-20 updated

Update NethASP dialog box